

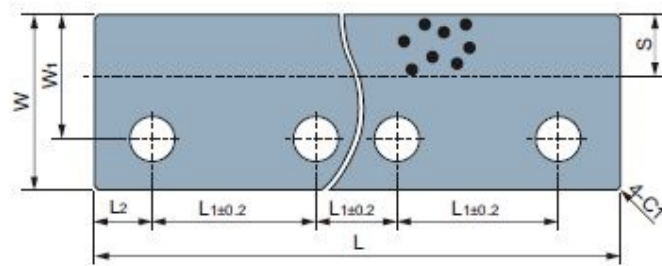
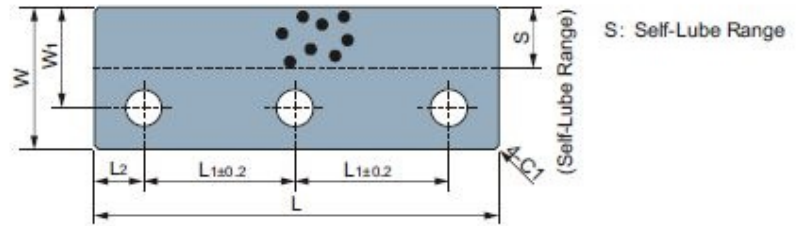


# THEC –OPW / OPF / OPS

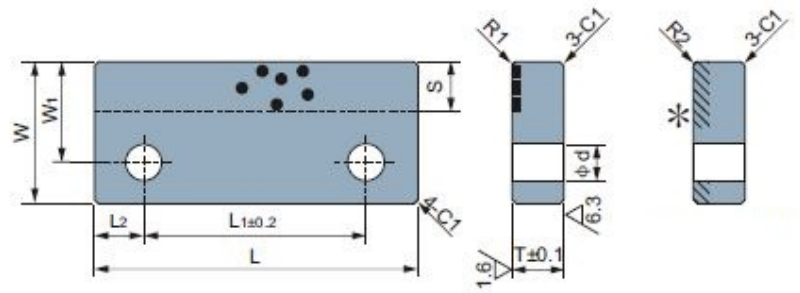

Sliding directions  
↔

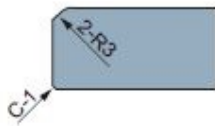

Código	W	L	T	W1	L1	L2	d	S	QTD FUROS PARAFUSO
OPW – 70X160	70	160	25	50	110	25	18	25	2
OPW – 70X200		200			75				
OPW – 70X240		240			90				
OPW – 85X200	85	200	28	60	75	25	22	30	3
OPW – 85X240		240			90				
OPW – 85X300		300			80				
OPW – 85X350		350			90				
OPF – 55X180	55	180	25	37.5	120	30	18	24	2
OPF – 70X160	70	160		50	110	25		25	
OPF – 70X200		200			75			30	
OPF – 70X240		240	90		30				
OPF – 85X200	85	200	28	60	75	25	22	30	3
OPF – 85X240		240			90				
OPF – 85X300		300			80				
OPF – 85X350		350			90				

Código	W	L	T	W1	L1	L2	d	S	QTD FUROS PARAFUSO
OPF – 100X200	100	200	28	70	75	25	22	30	3
OPF – 100X240		240			90	30			
OPF – 100X300		300			80	30			4
OPF – 100X350		350			90	40			
OPS – 70X160	70	160	25	50	110	25	18	25	2
OPS – 70X200		200			75			30	3
OPS – 70X240		240			90	30			
OPS – 85X200	85	200	28	60	75	25	22	30	3
OPS – 85X240		240			90	30			
OPS – 85X300		300			80	30			4
OPS – 85X350		350			90	40			
OPS – 100X200	100	200	28	70	75	25	22	30	3
OPS – 100X240		240			90	30			
OPS – 100X300		300			80	30			4
OPS – 100X350		350			90	40			